


2.3 INSTALLATION

External View

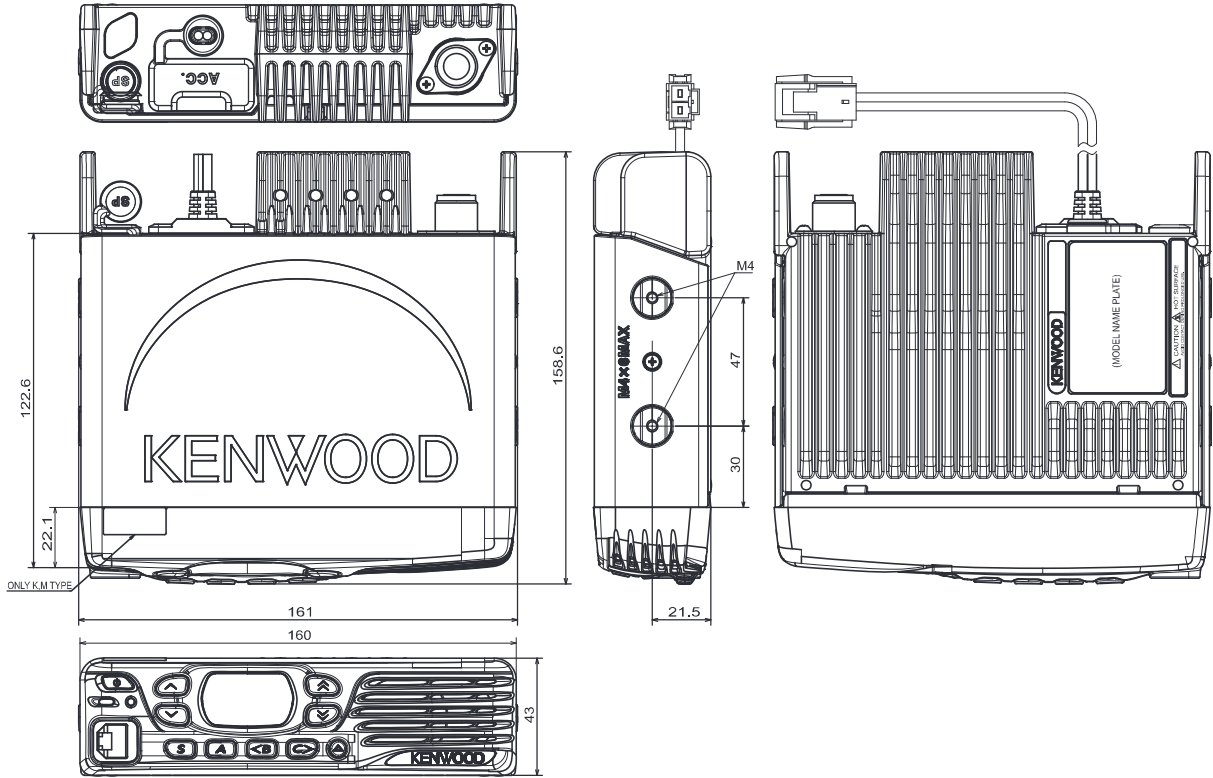

2.3.1 Connection Cable (KCT-60: Option)


The KCT-60 connection cable kit is used to connect the transceiver to a Horn alert cable, KCT-18 (Ignition sense cable), KES-5 (External speaker), or through the KCT-36 extension cable.

2.3.1.1 Installing the KCT-60 (Connection cable) in the transceiver

- (1) Remove the ACC. cap on the rear of the transceiver.
- (2) Connect the D-sub connector of the KCT-60 to the D-sub 15-pin terminal of the transceiver.
- (3) Connect the 15-pin connector of the KCT-60 to a Horn alert cable, KCT-18, KES-5, or through a KCT-36 extension cable.

Note:

You must set up using the KPG-166D.

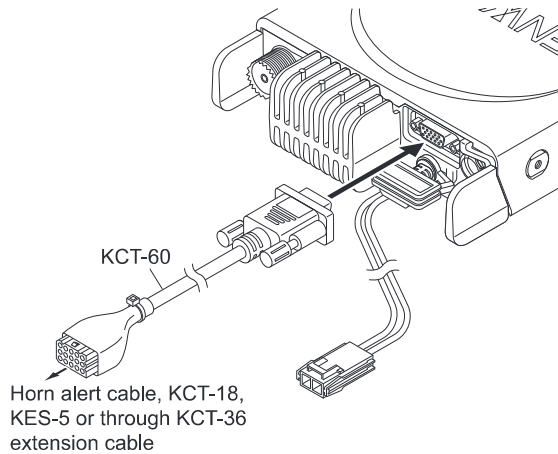

2.3.1.2 Terminal function

D-sub 15-pin Pin No.	Name	Molex 15-pin Pin No.
1	SB	1
2	IGN	2
3	PA or External SP	12
4	DETO	4
5	DATAI	5
6	FNC1	9
7	FNC2	11
8	FNC3	7
9	FNC4	6
10	FNC5	8
11	FNC6	10
12	5MS	NC
13	HR1	13
14	HR2	14
15	GND	3